


Operating and changing instructions

Combination lock: 1985/3330/3332/3370

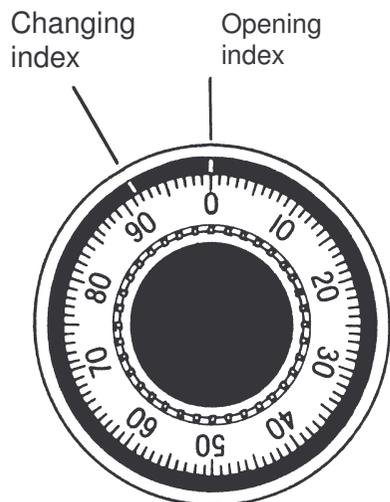

General

- Always turn the dial slowly and carefully.
- Place the chosen numbers exactly inline with the Opening- or Changing index.
- The Changing index is always on the left side of the opening index.
- You can stop turning as much as you like. If a number is over flown, start all over again with the first number.
- Never choose the last number between the 0 and 20.
- Each number has to be at least 4 increments apart from the other.
- Try the new combination several times to make sure the lock opens and locks perfectly, before locking the door.
- Never force the lock; Turning must always go smoothly, if not ask the technical service to have a look at it.

Do not force the lock!

A. Opening the lock using the opening index:

The lock combination is 10 – 20 – 30

- 4x**  Turn LEFT and pass “10” (the first number of the combination) three-times and stop exactly on the Opening index the fourth time.
- 3x**  Turn RIGHT and pass “20” (the second number of the combination) twice and stop exactly on the Opening index the third time.
- 2x**  Turn LEFT and pass “30” (the third number of the combination) once and stop exactly on the Opening index the second time.
-  Turn RIGHT until stop, and the lock is open. The dial stops between 90-0 on the Opening index.

B. To lock the combination lock:

Turn at least four complete turns LEFT.

C. Changing instructions: (Use Changing index)

To change the combination, you will need access to the existing combination and a La Gard Locks change key.

Open the lock and door. With the bolt fully retracted (lock open), before changing combinations, verify that the dial stops between 90 and 0 on the Opening index.

Dial the existing code using the CHANGING INDEX, for example 10-20-30.

4x Turn LEFT and pass “10” three-times and stop exactly on the Changing index.

3x Turn RIGHT and pass “20” twice and stop exactly on the Changing index.

2x Turn LEFT and pass “30” once and stop exactly on the Changing index.


Insert the change key (with the long side) in the keyhole at the back of the door and turn to the RIGHT until stop.

Do not force the change key

If the key will not go in far enough – it will not turn.

Remove the key and dial the old code on the CHANGING INDEX, stopping exactly on each number.

Select a NEW COMBINATION CODE.

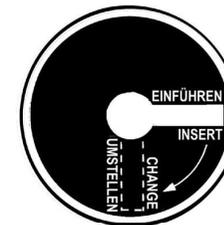

Last number must be higher than 20.

- 4x**  Turn LEFT, pass first number “47” three-times and stop exactly on the Changing index the fourth time.
- 3x**  Turn RIGHT, pass second number “8” twice and stop exactly on the Changing index the third time.
- 2x**  Turn LEFT, pass third number “82” once and stop exactly on the Changing index the second time.


If a number is over flown, start on the beginning, using the Changing index. Turn change key LEFT and remove the key. The new code is inserted.

Try the new combination several times to make sure the lock opens and locks perfectly, before locking the door.

ATTENTION! For security reasons, never select a code from personal data (birthday, telephone number, et cetera). Each number has to be at least 4 increments apart from the others. For example: 49–45-41 and not 51–52–53.

Operating and changing instructions

Combination lock: 1985/3330/3332/3370

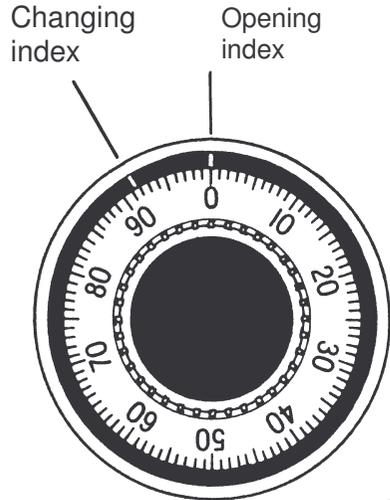

General

- Always turn the dial slowly and carefully.
- Place the chosen numbers exactly in line with the Opening- or Changing index.
- The Changing index is always on the left side of the opening index.
- You can stop turning as much as you like. If a number is over flown, start all over again with the first number.
- Never choose the last number between the 0 and 20.
- Each number has to be at least 4 increments apart from the other.
- Try the new combination several times to make sure the lock opens and locks perfectly, before locking the door.
- Never force the lock; Turning must always go smoothly, if not ask the technical service to have a look at it.

Do not force the lock!

A. Opening the lock using the opening index:

The lock combination is 10 – 20 – 30

- 4x  Turn LEFT and pass “10” (the first number of the combination) three-times and stop exactly on the Opening index the fourth time.
- 3x  Turn RIGHT and pass “20” (the second number of the combination) twice and stop exactly on the Opening index the third time.
- 2x  Turn LEFT and pass “30” (the third number of the combination) once and stop exactly on the Opening index the second time.
-  Turn RIGHT until stop, and the lock is open. The dial stops between 90-0 on the Opening index.

B. To lock the combination lock:

Turn at least four complete turns LEFT.

C. Changing instructions: (Use Changing index)

To change the combination, you will need access to the existing combination and a La Gard Locks change key.

Open the lock and door. With the bolt fully retracted (lock open), before changing combinations, verify that the dial stops between 90 and 0 on the Opening index.

Dial the existing code using the CHANGING INDEX, for example 10-20-30.

4x Turn LEFT and pass “10” three-times and stop exactly on the Changing index.

3x Turn RIGHT and pass “20” twice and stop exactly on the Changing index.

2x Turn LEFT and pass “30” once and stop exactly on the Changing index.


Insert the change key (with the long side) in the keyhole at the back of the door and turn to the RIGHT until stop.

Do not force the change key

If the key will not go in far enough – it will not turn.

Remove the key and dial the old code on the CHANGING INDEX, stopping exactly on each number.

Select a NEW COMBINATION CODE.

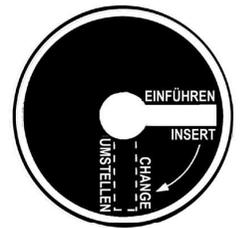

Last number must be higher than 20.

- 4x  Turn LEFT, pass first number “47” three-times and stop exactly on the Changing index the fourth time.
- 3x  Turn RIGHT, pass second number “8” twice and stop exactly on the Changing index the third time.
- 2x  Turn LEFT, pass third number “82” once and stop exactly on the Changing index the second time.

If a number is over flown, start at the beginning, using the Changing index. Turn change key LEFT and remove the key. The new code is inserted.

Try the new combination several times to make sure the lock opens and locks perfectly, before locking the door.

Each number has to be at least 4 increments apart from the others.

ATTENTION! For security reasons, never select a code from personal data (birthday, telephone number, et cetera).